

## SECTION 4 CIRCUIT ADJUSTMENTS


### 4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied Remote Control Commander RM-836.

Range of adjustments available from the on screen menu system.


#### HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power of the set and enter into stand-by mode.
2. Press the following sequence of buttons on the Remote Control Commander.

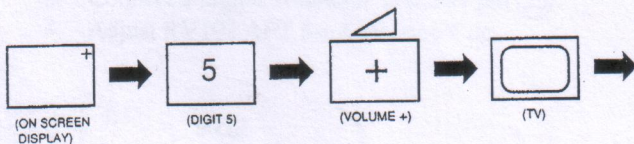

"TT--" will appear in the top right corner of the screen. Other status information will also be displayed.

3. Press the MENU button on the Remote Commander to obtain the menu on the screen.

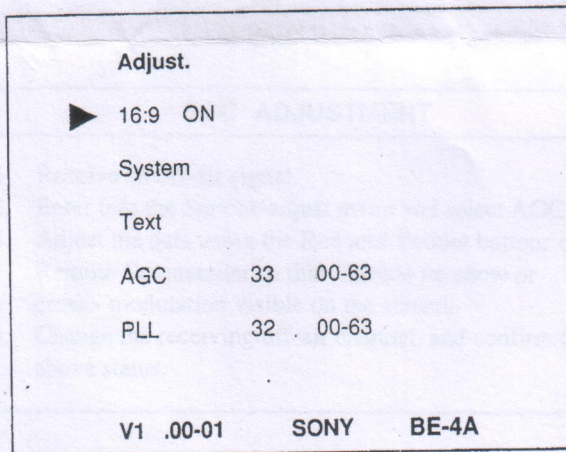

Software version

Adjustment	Set	Range
16:9 Off	Select	ON/OFF
System	Select	BG-L, BG-DK UK, Eire, BG
Text	Select	EAST/WEST
AGC	Adj.	00 - 63
PLL	Adj.	00 - 63
B&W Delay	Adj.	00 - 63
Ver Size	Adj.	00 - 63
Ver, Breath	00	00 - 63
Par, Ampl	00	00 - 63
Par, Tilt	32	00 - 63
V, Linear	Adj.	00 - 63
Corn, corr	00	00 - 63
V, Cen or EW	Adj.	00 - 63
V, Position	42	00 - 63
H, Centre	Adj.	00 - 63
Blue HWB	Adj.	00 - 63
Green HWB	Adj.	00 - 63
Red HWB	Adj.	00 - 63

4. Press the Blue (Next) or Green (previous) buttons to select the adjustment item from the table.
5. Press the Yellow (+) or Red (-) buttons to change the data as required.
6. Turn off the power to quit the service mode when adjustments are completed.




### IF ADJUSTMENT (AUTOMATIC)

1. Input a 38.9 MHz 100dB $\mu$  CW signal at the IF Out injection point.
2. Enter into service mode and press 34.
3. Connect a digital voltmeter to IC101 pin (23).
4. Check AFT 2.5V  $\pm$ 0.3V dc.
5. Press '00' on the Remote Commander.

### SYSTEM L ADJUSTMENT ( French Models)


1. Input a 33.9MHz 100dB $\mu$  CW signal at the IF Out injection point.
2. From the On Screen Menu set System to L band 1.
3. Connect a digital voltmeter to IC101 pin (23).
4. Adjust RV102 AFT for 2.5V  $\pm$ 0.3V dc.

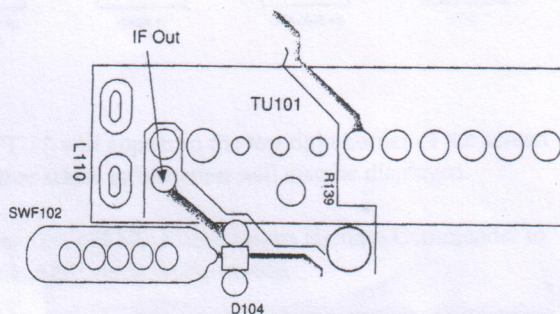

- A Board Print Side -

### AGC ADJUSTMENT

1. Receive an off-air signal.
2. Enter into the Service adjust menu and select AGC.
3. Adjust the data using the Red and Yellow buttons on the Remote Commander so that there is no snow or cross - modulation visible on the screen.
4. Change the receiving off-air channel, and confirm the above status.

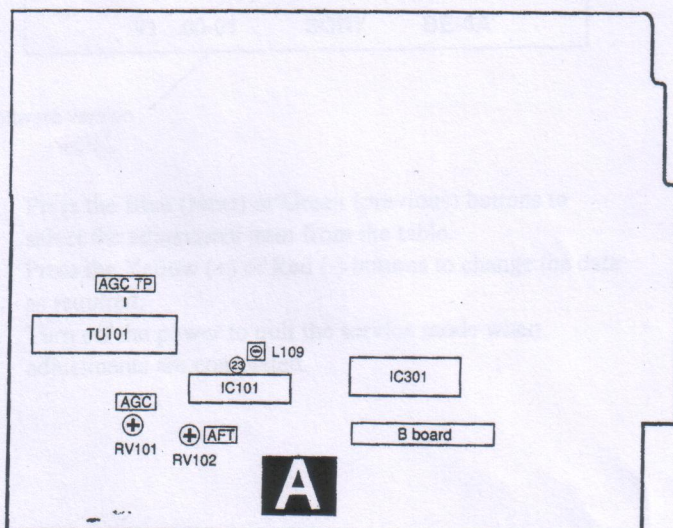

- A Board Component Side -

### DEFLECTION SYSTEM ADJUSTMENT

1. Enter into the service mode.
2. Using the Blue or Green buttons select the Adjust item.
3. Press the Yellow button to enter the adjustment submenu.
4. Select and adjust each item in order to obtain the optimum image.

 
See Note on page 22

Adjustment	Set	Range
VERT, AMPL	Adj.	00 - 63
VER, BREATH	00	00 - 63
PAR, AMPL	00	00 - 63
PAR, TILT	32	00 - 63
V, LINEAR	Adj.	00 - 63
CORN, CORR	Adj.	00 - 63
V, CENTRE	Adj.	00 - 63
V, POSITION	42	00 - 63
H, CENTRE	Adj.	00 - 63


VERT, AMPL




V, LINEAR



V, CENTRE

 

H, CENTRE

 

Fit the link as required to obtain the correct horizontal picture size.